



- **Stability:** $\pm 0.1^{\circ}$ C including effects of line voltage, ambient temperature and aging
- **Uniformity:** $\pm 0.2^{\circ}$ C component area
- **Temperature Range:** -55° C to $+150^{\circ}$ C ($+200^{\circ}$ C max. temperature optional)
- **Rate Change:** See figures 1A and 1B
- **Energy Use:** 6-7 KVA typical depending on temperature

Specifications are valid for the chamber equipped with a four inch high cover, a component support wheel and a dual row crystal test wheel installed.

- **Coolant:** Water Cooled Mechanical refrigeration: More energy efficient, improved reliability, lower heat load in working environment (Air cooled refrigeration unit optional.)
- **LN₂ or CO₂:** Coolant boost options available
- **Programmable Keyboard:** Programmable keyboard allows temperature to be set, stepped (at user-defined increments), slewed (at user-defined rates) and cycled
- **Remote Operation:** Chambers may be remotely controlled via IEEE bus or RS232C port
- **Flexible Tooling:** Can be easily customized for testing needs

The Roditi International Corporation Ltd

Machiavelli House, 102 Stewarts Road, London SW8 4UG. Tel: +44 (0) 20 7819 8080

Fax: +44 (0) 20 7720 5261. e-mail: saunders@roditi.com www.roditi.com



Chamber cover removed exposing rotating fixture. Test heads may be fixtured from 2 to 48 contacts. Up to 254 parts may be tested in one chamber (depending upon components tested).

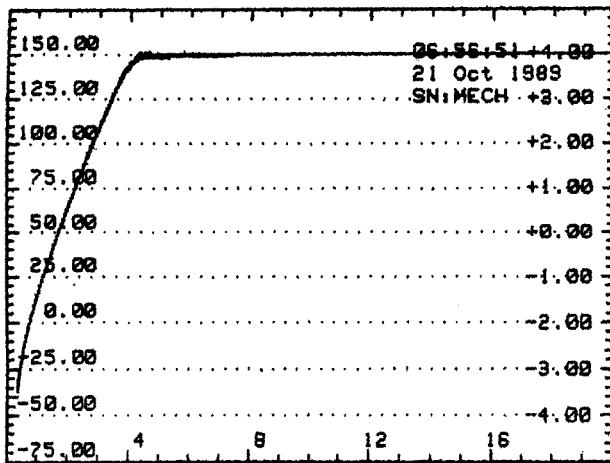


Figure 1A: Temperature transition -60° to +150°C

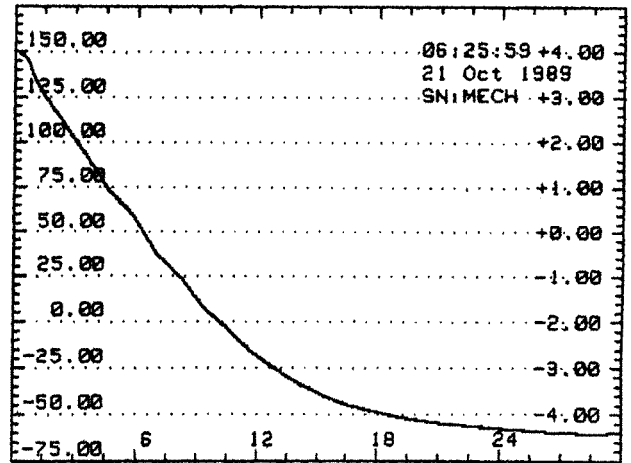


Figure 1B: Temperature transition +150° to -60°C

Figures 1A and 1B show the temperature transition of the 4220 chamber from one end of the temperature range to the other.

The Roditi International Corporation Ltd is the exclusive European representative of Saunders & Associates, LLC