

- Quartz crystal final frequency adjust plating system
- Vertical evaporation and pulse width modulation of filament power results in minimal plating material usage
- Single aperture with three axis adjustment for simple plating spot alignment
- Precision plating to load resonant frequency using "Measured FL" method
- No physical capacitor required
- Over 40 different crystal parameter measurements, including DLD and Spurious
- Optional S&A 2296 Heater Kit for plating at crystal turning point temperature



- Proprietary magnetic wheel uses no sockets
- Contacts directly to crystal leads
- Standard wheel holds 50 devices and accepts HC-45 and HC-49 type packages
- 100 Position HC-49US wheel available
- Various HC-family, SMD and custom wheels available

### SPECIFICATIONS

**250B-1 Frequency Range:**

15 KHz to 220 MHz

**250C Frequency Range:**

15 KHz to 500 MHz

**Plating Performance:**

± 1 ppm typical final frequency

± .1 ppm with S&A 2296 Heater Kit Option

**Throughput:**

500 units/hour (100 Position Wheel)

400 units/hour (50 Position Wheel)


## Roditi International Corp. Ltd,

Machiavelli House, 102 Stewarts Road, London. SW8 4UG. Tel: +44 (0) 20 7819 8080  
FAX: +44 (0) 20 7720 5261 E-Mail [saunders@roditi.com](mailto:saunders@roditi.com) - World Wide Web <http://www.roditi.com>

## SYSTEM CONFIGURATION

- S&A 250B-1 or 250C Network Analyzer
- Direct Drive Roughing Pump
- Cryo, Diffusion or Turbo Pump
- Computer
- *Windows*<sup>®</sup> based System Software
- S&A PCI TTL I/O Card

## SCREEN FORMAT

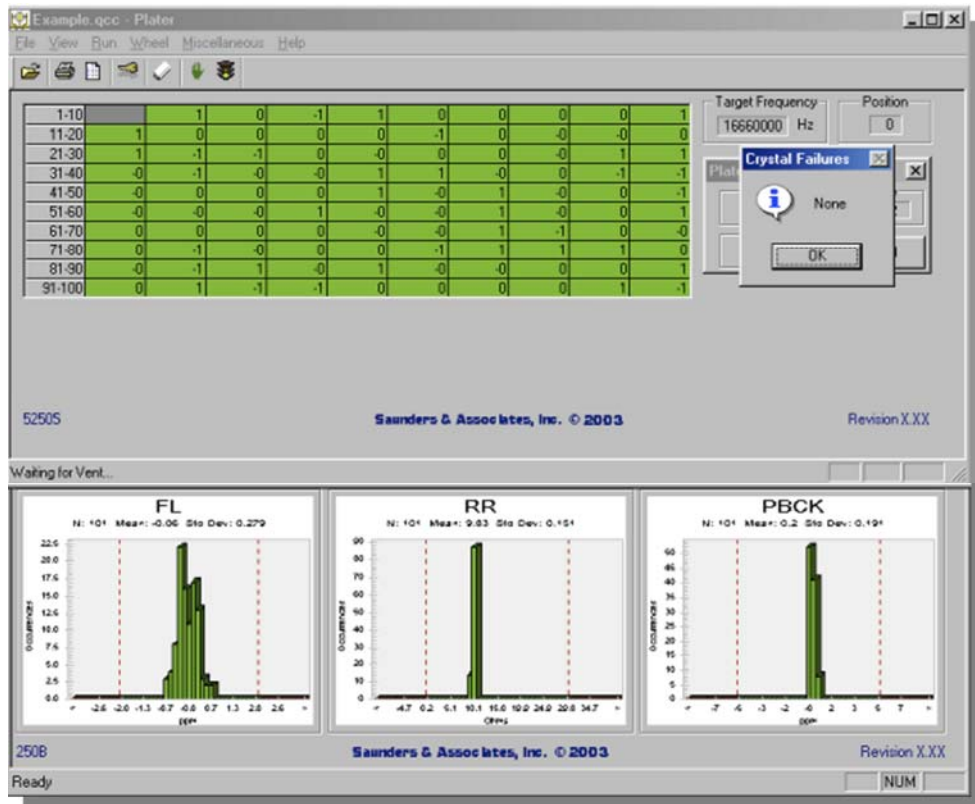

## FACILITY REQUIREMENTS

- **Power:** 220 or 380 Volts, 3-Phase, 15 Amps
- **Inlet Pressures:** 150 PSIG Maximum
  - **Air:** 90 PSIG
  - **Nitrogen:** 20 PSIG
- **Water Cooling (Diffusion):** 0.15 GPM @ 60 - 80° F (16 - 27° C)
- **Dimensions:** 22 x 70 x 40 inches (54.6 x 177.8 x 101.6 cm)

The Roditi International Corporation Ltd is the exclusive European representative of Saunders & Associates, LLC